

EXTECH® Quick Start

CO270 - Air Quality CO<sub>2</sub> Meter


Introduction

This Quick Start is intended only for reference and to quickly set up the meter. Refer to the User Manual, available on the Extech website, for detailed instructions.

Power Supply





The meter is powered by three AAA batteries (rear compartment). Press the power button to switch ON.

Control buttons

	Short press: ON; Long press: OFF
<b>SET</b>	Long press to access setup menu
Plus (+)	Set a parameter value in setup menu
<b>AVG</b>	View 8- and 24-hour average (and 24-hour peak)
<b>MUTE</b>	Mute beeper
<b>SET</b> and <b>MUTE</b>	Press together to unlock meter
<b>SET</b> and <b>+</b>	Press together to access calibration mode

Display Icons

In addition to the temperature, humidity, and CO<sub>2</sub> readings, the meter shows multifunction icons, as listed below.

	Emoji for normal, moderate, and high CO <sub>2</sub> with green, yellow, red labels
<b>8h</b>	8-hour average reading
<b>24h</b>	24-hour average reading
<b>AVG</b>	Average mode
<b>PEAK</b>	24-hour peak reading
<b>ECO</b>	Conserves battery
	Low battery
	Password lock
	Beeper status
<b>ppm</b>	Parts per million units

Basic Operation

The meter indicates CO<sub>2</sub>, temperature, and humidity. Before first use, place the meter near an open window on a sunny day for twenty minutes, then check that it reads between 350 and 450 ppm. If not, calibrate the meter, per instructions below.

Mounting

The monitor can be set on a desktop, using the rear tilt-stand, or wall-mounted using the supplied anti-theft mounting kit.

Setup Mode

For complete setup instructions, refer to the user manual. Setup parameters include Password lock, Alarm threshold, Temperature units, Auto baseline calibration, and Economy (ECO) mode.

Average and Peak Modes

Use the **AVG** button to step through the 8- and 24-hour average readings, and the 24-hour peak reading.

CO<sub>2</sub> Calibration

- Long press the **CAL** and **+** buttons.
- Press the **+** button to select **YES**.
- After the 300 second calibration, the display will show **PASS** or **FAIL**. Retry the calibration if **FAIL** is displayed.
- Press **SET** to exit the calibration mode.

Basic Specifications

CO <sub>2</sub> range	0 to 9999 ppm
Temp. range	32 to 122°F (0 to 50°C)
Humidity range	5 to 95% RH
Dew point range	-90.8 to 122.0°F (-68.2 to 50.0°C)
Power	Three (3) AAA batteries
Operating conditions	32 to 122°F (0 to 50°C); <95% RH
Storage conditions	-4 to 122°F (-20 to 50°C); <95% RH
Dimensions	3.4 x 3.4 x 1.0 in. (86 x 86 x 25 mm)
Weight	4.1 oz. (115 g)

Customer Support

Local Support Telephone List:  
<https://support.flir.com/contact>  
Returns (RMA):  
<https://customer.flir.com/home>

Warranty

Teledyne FLIR warrants this Extech brand instrument to be free of defects in parts and workmanship for **two years** from date of shipment. To view the full warranty text, see <https://www.flir.com/support-center/warranty/>

Copyright © 2025 Teledyne FLIR Commercial Systems, Inc.  
All rights reserved including the right of reproduction in whole or in part in any form.  
[www.extech.com](http://www.extech.com)  
This document does not contain export-controlled information.

